


## Paper Machine Loading

1. Load paper with seam binding to the back of the dispenser.
2. Load paper square to the front of the machine.
3. Do not over load paper machine past fill line.  $\frac{3}{4}$  full is a good rule of thumb.
4. Check machine frequently. Machine will continue to accept coins when empty.
5. For easier dispensing, load less than full line.

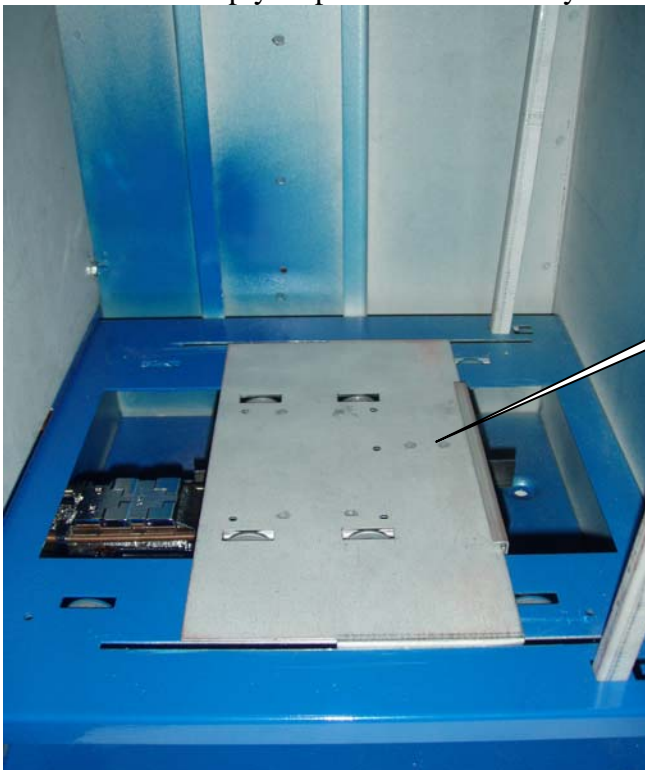


Picture shows empty dispenser and slide tray.



Slide tray.


### Coin Jams

Remove slide tray (shown above) to access coin shoot.  
Release coin shoot springs to ease access to coin shoot screws.  
Remove top two screws to access jammed coins or item.

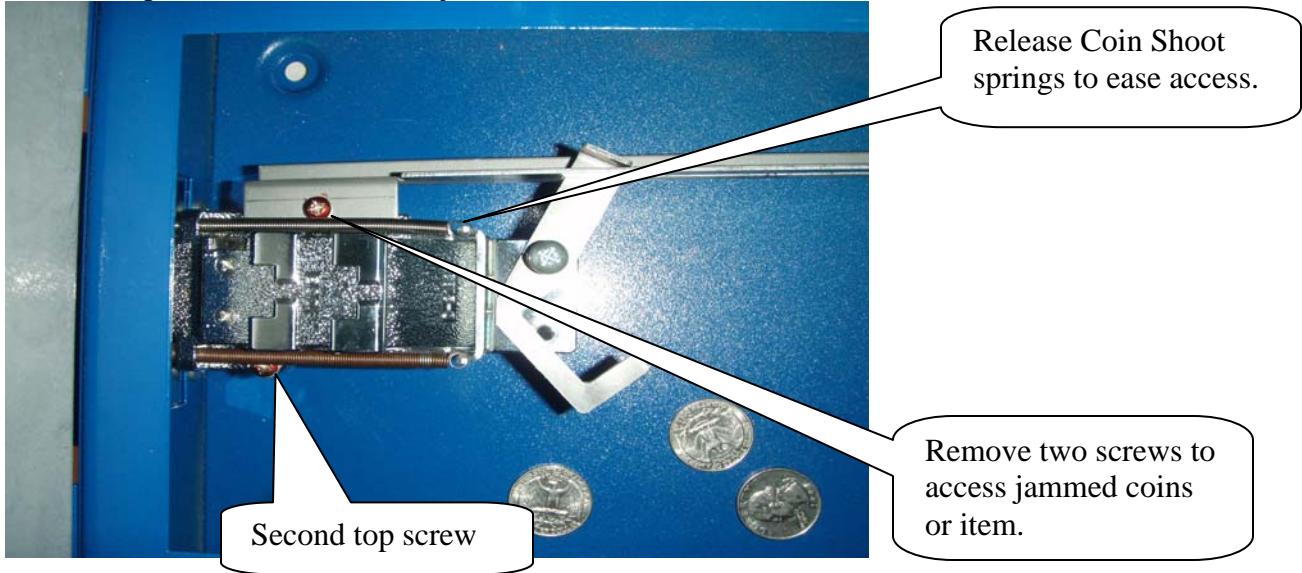

When replacing top of coin shoot after removing jam make sure top fits tightly back to coin shoot before screwing down.

Coin shoot may be removed as a last resort by removing the four following screws.  
The bottom two are very difficult to access. (Not showing below)

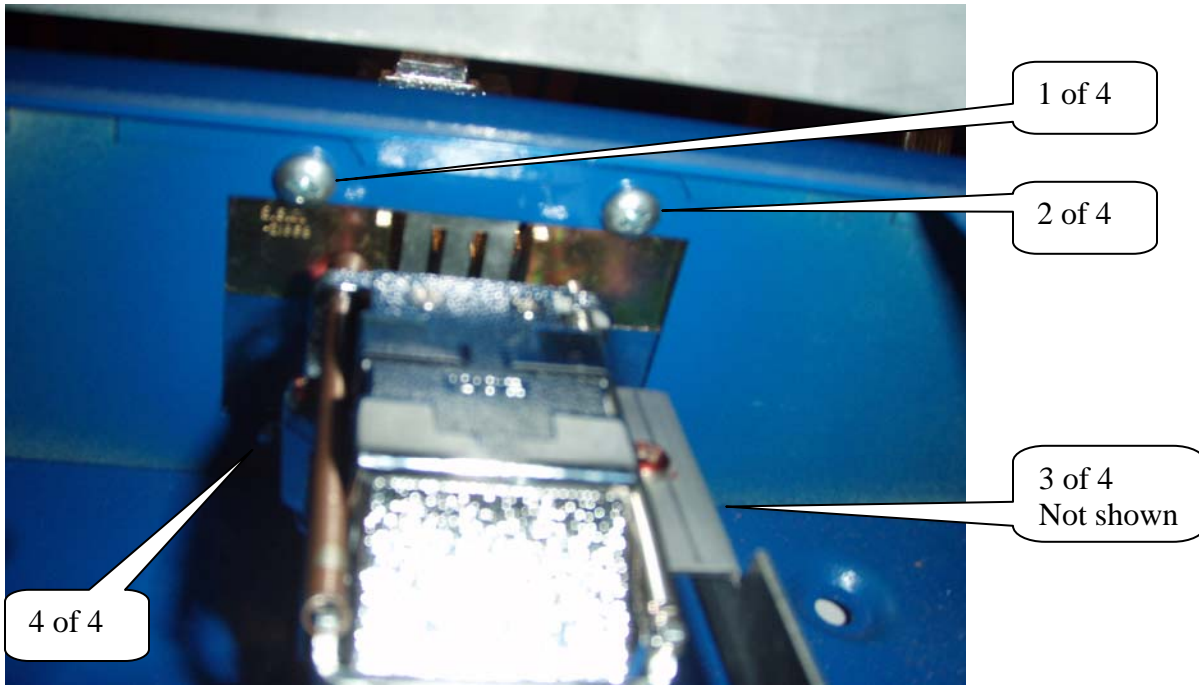

Call us if you need help.  
1-888-328-8270